

ASSEMBLY AND INSTRUCTION GUIDE FOR INDUSTRIAL SEATING ERGONOMIC CHAIR MODELS

ASSEMBLY GUIDE FOR SINGLE LEVER SEAT PLATE

Your industrial Seating Chair should have the following parts in the carton:

- * Five Star Aluminum or Plastic Base With Casters or Glides (A)
- * Footring (B) *** Optional on Bench Height Models.***
- * Pneumatic Cylinder (C)
- * Seat Cushion With Seat Plate Control. (D)
- * Male Seat Knob (E) with Flat and Lock Washers
- * Back Bar (F)
- * Female Back Bar Knob (G)
- * Plastic Washer (H)
- * Back Cushion (I)



How to Assemble Your Chair

- Step 1.- Remove all the parts from the box
- Step 2.- If you chair has an Adjustable Footring (B) slip it onto the Pneumatic Cylinder (C) Check that the Tubular Ring Faces Upward. Tighten the Hand Wheel Securely to the Desire Height
- Step 3.- Insert the Pneumatic Cylinder (C) into the hole of the Base (A) Checking that this fit good
- Step 4.- Insert the Seat Cushion Control unit Hole (D) into the top of the Pneumatic Cylinder (C). Sit on the Seat With all of your Weight Several Times for a Tight Fit
- Step 5.- Remove the Seat Knob & the Washers from the control Unit Seat Plate (E) **This Knob has 1 Flat Washer & 1 Lock Washer**
- Step 6.- Insert the Back Bar (F) Into the Slot of the Seat plate Control Unit (D) Then put the Washers and Seat knob Back. Tighten the Seat Knob Securely
- Step 7.- To Adjust the Height of your Back Cushion (I) Loosen The Back Knob (G) Pull Up or Down to the Desire Height Then Tighten Securely.

TO ADJUST YOUR CHAIR

- *To Raise your Seat, Lift your Weight of the chair and pull up lever Release Lever when the Seat is on the Desire Height.
- *To Lower the Seat, While you are seated pull up Lever, Release when the Seat is on the Desire Height



ATTENTION

ALL SHIPPING DAMAGES, MISSING PARTS OR RETURN OF PRODUCT MUST BE REPORTED TO US WITHIN 7 DAYS OF RECEIPT OF GOODS

* IMPORTANT IF YOU NOTICED BAD FUNCTIONING AFTER THE ASSEMBLE OF THIS CHAIR STOP THE USE AND CALL INDUSTRIAL SEATING FOR ASSISTANCE. 800-486-9666



ASSEMBLY AND INSTRUCTION GUIDE FOR INDUSTRIAL SEATING ERGONOMIC CHAIR MODELS

ASSEMBLY GUIDE FOR THREE LEVER SEAT PLATE

Your Industrial Seating Chair should have the following parts in the carton:

- * Five Star Aluminum or Plastic Base With Casters or Glides (A)
- * Foot ring (B) *** Optional on Bench Height Models.***
- * Pneumatic Cylinder (C)
- * Seat Cushion With Seat Plate Control. (D)
- * Back Cushion With Back Bar (E)
- * Back Seat Knob (F)

HOW TO ASSEMBLE YOUR CHAIR

Step 1.- Remove all the parts from the box


Step 2.- If you chair has an Adjustable Foot ring (B) slip it onto the Pneumatic Cylinder (C) Check that the Tubular Ring Faces Upward. Tighten the Hand Wheel Securely to the Desire Height

Step 3.- Insert the Pneumatic Cylinder (C) into the hole of the Base (A) Checking that this fit good

Step 4.- Insert the Seat Cushion Control unit Hole (D) into the top of the Pneumatic Cylinder (C). Sit on the Seat With all of your Weight Several Times for a Tight Fit

Step 5.- Loosen the Seat knob from the control Unit Seat Plate (F)

Step 6.- Insert the Back Cushion With the Back Bar (F) Into the Slot of of the Seat plate Control Unit (D) put the back cushion to the Desire height then tighten securely

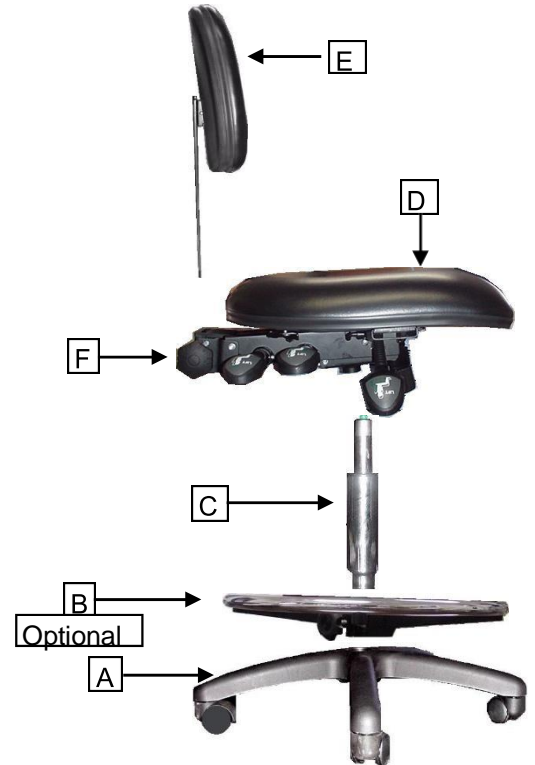


TO ADJUST YOUR CHAIR

*To Raise your Seat, Lift your Weight of the chair and pull up lever (B) Release Lever when the Seat is on the Desire Height.

*To Lower the Seat, While you are seated pull up Lever, Release when the Seat is on the Desire Height (B)

ANGLE OF THE SEAT CUSHION:

*First loosen the Seat Knob from the bottom of the Seat (A). Then While you are seated lift lever (C) to release the seat. To Adjust the seat to the desire position you must incline to the front or back until you put it to the desire position Then release the lever (C) to lock

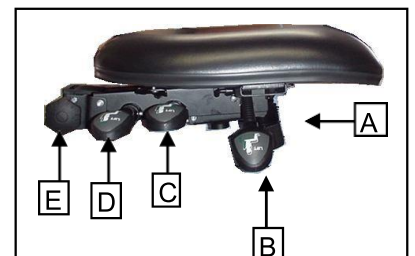

ANGLE OF THE BACK CUSHION:

* While you are seated pull lever (D) up then with you back weight adjust the angle to the desire position. Release the lever (D) to lock

ATTENTION

ALL SHIPPING DAMAGES, MISSING PARTS OR RETURN OF PRODUCT MUST BE REPORTED TO US WITHIN 7 DAYS OF RECEIPT OF GOODS

* IMPORTANT IF YOU NOTICED BAD FUNCTIONING AFTER THE ASSEMBLE OF THIS CHAIR STOP THE USE AND CALL INDUSTRIAL SEATING FOR ASSISTANCE. 800-486-9666 EXPLAINING THE PROBLEM.